

# Red Guide Post installation procedure




macquarie and lachlan valley weeds advisory committees



The purpose of this procedure is to provide a consistent approach to the installation of red guide posts throughout New South Wales.

Red Guide posts are being installed along roadsides to:

- Identify known locations of high risk noxious weeds
- Alert machinery operators of the site
- Encourage liaison with local council weed officers on each site's requirements
- Prevent further spread of noxious weeds along high risk pathways



**Location along roads with existing guide posts:** Red guide posts are to be installed on the fence side beside existing delineated white guide posts nearest to the start & end of the noxious weed infestation. Distance between white & red posts = 200mm.

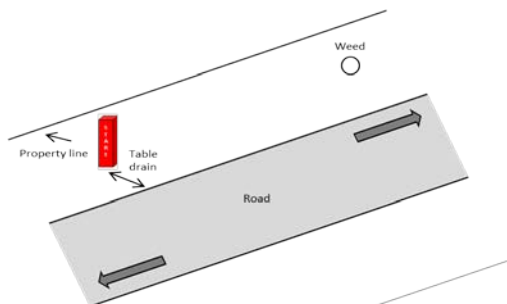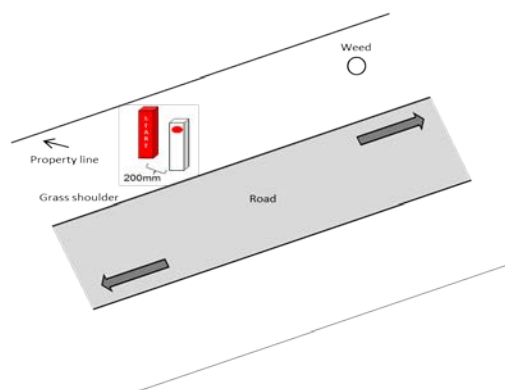

**Location along roads with no existing guide posts:** Red guide posts are to be installed the fence side of the table drain so as not to hinder grading. Note: grader operators should be checking with the weed officer prior to entering a red guide posted site.

**Installation procedure:** Refer to the *Reflex marker post system installation procedure* on page 2.

**Placement of Sticker:** Position sticker 50mm from top of post. Peel a small portion off the back of the sticker. Once in correct position peel the remaining sticker off smoothing the sticker into place in a downward motion. Once fully stuck, peel the front sticker off. The letters should be all that remains on the post.

**Record GPS coordinates:** Record red guide post locations (start & end); estimate the length of the actual infestation, and submit to Regional Project Officer.

**Inform:** Communicate with neighbouring landholders regarding the red guide post site.



# Reflex<sup>®</sup>

## MARKER POST SYSTEM

### INSTALLATION PROCEDURE



#### Step 1

##### Ground Preparation

Loosen the surface of the ground where installation is to take place



#### Step 2

##### Installation Preparation

Slide the Guide Post into the 1 part driver within the profile slides and lift into driving position



#### Step 3

##### Installation

Stretch and bend your knees throughout the driving process



#### Step 4

##### Check Depth Marker

Ensure post is driven into Depth Mark position



#### Step 5

##### How to Uninstall

Place driver back onto post and insert removal rod into the removal hole of the post - remove by using reverse installation action